


WHEN PC BOARD IS USED ON THE UNITS EQUIPPED WITH CONTACTOR ON COMPRESSOR POWER LINE, THIS RESISTANCE MUST BE CUTTED

QUANDO LA SCHEDA E' USATA NEI MODELLI DOTATI DI TELERUTTORE DI COMANDO DEL COMPRESSORE, QUESTA RESISTENZA DEVE ESSERE TAGLIATA

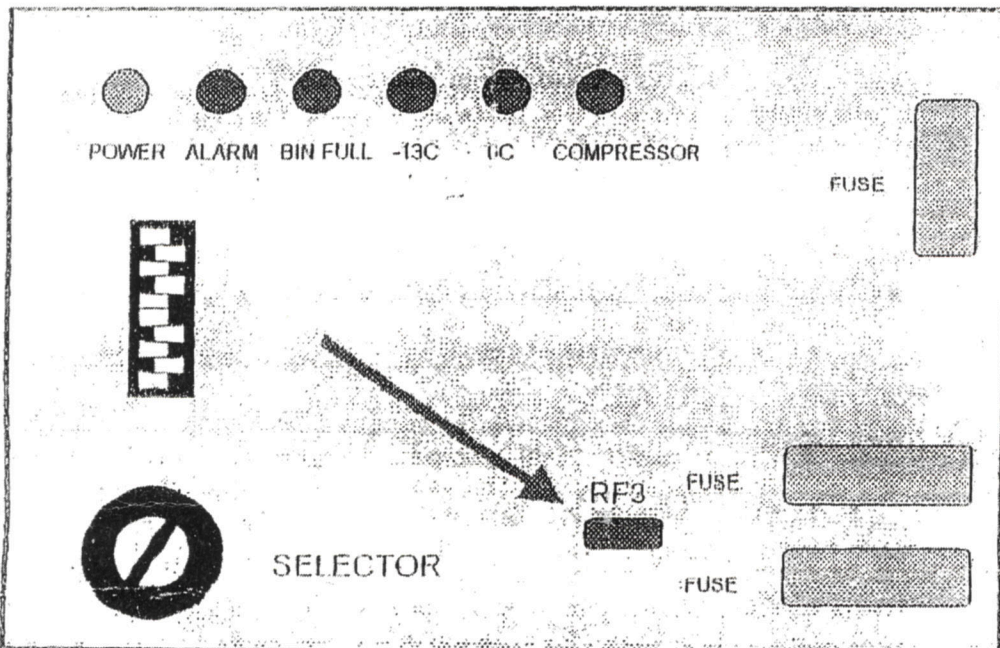

QUAND LA CARTE EST UTILISÉE SUR LES MACHINES AVEC LE CONTACTEUR SUR L'ALIMENTATION ELECTR. DU COMPRESSEUR, CETTE RESISTANCE DOIT ETRE COUPÉE

FALLS DIE PLATINE IN MODELLE MIT HAUPTRELAIS AM KOMPRESSOR VERWENDET WIRD, SOLL DER WIDERSTAND GESCHNITTEN WERDEN.

### UNITS OPERATING WITH R 22

MODEL	1	2	3	4	5	6	7	8	9	10
ACM 35-55	ON	OFF	OFF	ON	ON	OFF	ON	ON	OFF	OFF
ACM 45 A	ON	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	OFF
ACM 45 W	ON	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF
B 26	OFF	OFF	OFF	ON	ON	OFF	ON	ON	OFF	OFF
BUL 20	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF
B 30	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	OFF
BUL 30	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
B 40	OFF	OFF	OFF	ON	ON	OFF	ON	ON	OFF	ON
BUL 40	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON
B 65	OFF	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF
BUL 65	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	OFF

### UNITS OPERATING WITH R 134a

MODEL	1	2	3	4	5	6	7	8	9	10
ACM 45 A&W	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON
ACM 55 A&W	ON	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
B 20	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON
BUL 20	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	OFF
B 30	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF
BUL 30	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF